

H-Field Moving Target - Start Up

Introduction

This bulletin documents how to start-up the H-Field mover and prepare to play a path using Kairos Autonomi's Shepherd software, with Task Sequences functionality.

Startup Sequence

- 1. On the box behind the driver's seat, flip the toggle switch to the "On" position. Verify the blue LED illuminates.
- 2. On the box behind the driver's seat, turn all circuit breakers on.
- 3. Wait at least 3 minutes, as there is no verification of the system being fully booted.
- 4. On the floor in front of passenger seat, remove the large battery jumper with the blue Anderson connector.
- 5. Insert the Anderson connector labeled "MAIN" into connector labeled "12V From Truck".
- 6. Insert the Anderson connector labeled "AUX" into connector labeled "12V Power Center".
- 7. On the VIM (i.e. the main black box by the driver seat) flip the right MAN/AUTO switch to the "MAN" position and the left ON/OFF switch to the "ON" position.
- 8. On the E-Stop (i.e. the lower black box by the driver seat), flip the switch to the "On" position.
- 9. On the Remote E-Stop box (i.e. the box with the three position dial), turn the dial to "Remote". (The "Bypass" position will bypass the Remote E-Stop box).
- 10. Turn on the controller.
- 11. The controller should automatically load the programs used to operate mover.

Kairos Autonomi Shepherd , 1.10.86				
Robotic Assets		Asset View	Con	iguration
Robotic Asset Management	(Here) 924	Y Marchine Y Browner		
VEH SNI100HEieldMovor		Video/map Biowsei		Assets Status
40 60 Gear 20 Speed (MPH)00 Neu 0 Speed (MPH)00 Neu			Rear Camera	
4 5 0 RPM x 1000 9 5 98 rpm 6 98 rpm		BOBH		134.194.129.20 134.194.129.20 Logging in Shared Link Login Success
20 Y 80 Fuel & 100 46%				×
0 5 10 15 20 25 12.6v Brake 100%	134.194.129.10 ▼ ■ ▶ ■ ● ▲			Login Success
		,	134.134.123.10	· ·
Steering 0*	Teleop/Remote Task	Sequences		1
Auto	Run to South turn point a	nd return Speed: 10 mph R	Outlet 1	76.2669973
	Bup to North turn point an	d return	Outlet 2 North Turp 39.34758611 -7	S 26291483
WAAS: 7 Enabled	Bun to South safety point	Position: 0 Rev	Gen Start @ South Turn, 39,34394161, -7	6.25987503
Temp Health Link Quality 25% 29004 11%	Run to North safety Load	point - 🕨 🔳 Abort 🏈	Gen Stop Set GPS	
				3:58 PM
				A 🖓 🖏 😵 3/18/2015

- 12. In Shepherd, on the "Asset View" tab and "Assets" sub-tab, locate "VEH.SN100H-Field" and single-click it, then scroll down, and click "Login".
- 13. Insert the key into the mover's ignition switch and turn it to the accessories position.
- 14. On the VIM flip the right MAN/AUTO switch to the "AUTO" position. Verify the "Ready" and "Enable" LEDs illuminate.
- 15. In Shepherd, on the "Asset View" tab and "P4S4" sub-tab, verify that the "Link Quality" is at 50% or above and the value immediately to the left is counting up.



- 16. In Shepherd, on the "Asset View" tab and "Teleop/Remote" sub-tab, click the "Start" button to start the mover's engine. Verify the RPM goes from 0 rpm when engine is off to around 600 rpm when engine is running.
- 17. In Shepherd, on the "Asset View" tab and "Teleop/Remote" sub-tab, click the "Enable" button. Verify the engine shuts off.
- 18. Repeat step 16.

Pre-Checks

- 19. VNC into the vehicle.
- 20. In Kairos Autonomi JAUS_IVN.exe, on the "P4S4 ServoPod" tab, verify data is streaming. If data is NOT streaming then reboot P4S4 and restart this procedure from Startup Sequence step 12.

🔨 Kairos Autonomi Shepherd 🛛 110.86	_ 0 ×
	1
Robotic Asset Management	
	Status
VEH_SN100HFieldMov	
40 50 Gear Application JAUS Commis Mession Prayload 5 Uala Uperation Payload 3 User P454 - ServeRed P454 - Unive CAN Line Com Payload 5 Uala	
20 TABBA-REBD UPICLE11091 ISB 0 1 0 1 0 2 12 1 2 1 0 0 2 0 20800 2115 344 0 0 0 1 0 3 0 208710 CM CMMR	
0	
Dependentifier Net 1:000-0550 Desire (1:00) 1:00 0 1:00 0 1:00 1:00 0 1:	
Calibre Rate Calib	
2 Re [STARTUP] • E ^ >>Send SVP Botte[] Bx Stack F [17/2020 [0:145 [2002] [Usey Hintory	29.20
Sevence Access Engine Values Sevence S	Shared Link
Part x1000 Part Cabade ACOn EableVeh Atom Ender Direct Deal In Ender Direct Dir	uess =
595 rpm	
40 50 A/C 1 Ferm Light Off Adult Adult 2 1 50 50 50 50 50 1000	
	▶
46% R Sock 1 * Queue 0	
	Login Success
	172
Auto	DAAO -
	102
UPS Enable 39 VAAS 7 Enable 39 VAAS 7 Enable 39 J Start 📕 📽 🖉 🚖 dibus - Adme Meet 🔍 distino - built in Sef 🐃 Link - 10 thered builta 🐃 bykunfundoore, Vess 🐃 disther Hop, Vesson 🔮 102 PM	F00
Temo Health Link Dual 🖉 Nato Turned 97 PD 🔯 Dates Actionom 201.	
25% 2987 7	
	🛱 🌒 🌄 😼 2/19/2015
	3/18/2013



21. In djLoader.exe, on the "OBD" tab, verify data is streaming. If data is NOT streaming then reboot P4S4 and restart this procedure from Startup Sequence step 12.



22. In djLoader.exe, on the "Odo" tab, verify data is streaming. If data is NOT streaming then reboot P4S4 and restart this procedure from Startup Sequence step 12.

	v		
		R型 sn09020118	
Recycle Bin	Pic2	[11] [12] [12] [12] [12] [12] [12] [12]	
	V	Coperation 1.10.20 Can Direct Can Direct	
-		Wheel Sensor Con Port	
Important	Pic3		
Tips		[Ve009209, 200928, 0201030, 0030109, FFFF, FFFF, 0909, 0009, 115200,081 Close dt DVP2	
<u>×</u>		K 10 1 2 0 1 1 0 1 0	
_?	and a	Sensor Type] Ducad Sensor → x= 3 y= 6 Position / 50ms Dist in it MPH Timing Position / 50ms Dist in it MPH Timing	
Reference	Pic4	Dear [2] Scan 20hz [F2] Enable Timing [U1] L Rear(0 0 0 0 Istopped Mappile GPS4	
Manual		Scan Tutiz [F1] Deable Timing [U0] Delta Cabulation Dol Timing Prescaler [Sv] Clear Actual Penume Actual Penet Hardware Miles USR 30	
H_{d}		Video Multipleser Zero Base CAMs IZ Wheel COD	
		Mux 0 Mux 1 Mux 2 Mux 3 Mux 4 Mux 5 Mux 6 Mux 7 Reset LED On LED 01 ED 01 ED 01 ED 01 University 1/339	
		Dump 1 Wire Set 1 Wire Dix 42 in linex 600 - 1/2poke	
6225G Con	рісэ - Сору	Messages	
	-		
<u> </u>			
7			
VLC media player	Pic7 - Copy		
p		EStop: USB System(25%)	
	V		
		· · · · · · · · · · · · · · · · · · ·	
Basis	Pic1 - Copy		
\checkmark	V		
			Wednesday
Pic1	pic5		AX 3010/2015
	<u> </u>		▲ 🖪 🗰 🕪 🖏 📭 4:00
			3/18



23. In djLoader.exe, on the "GPS3" tab, verify data is streaming and the "Antenna Status" is "9 WAAS".

Kairos Autonomi Shepherd ,	1.10.86	_ 0 ×
	R월 sn09020118	
Pasa Pasa Pasa Pasa Pasa Pasa Pasa Pasa	□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	Status
VEH_SN100HFieldMov	eljaader, Version 1.10.20	
40 60 Gear	REPS1 080 0wa 0ao	
20	Das Statut Construction Constru	
O Speed (MPH) ¹⁰⁰	Dad Vald school 195 768 48 5508 7465070 8 056 6 750 2 0 0 75 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
0mph 35	9 WAAS Start Control 252 Start Base Start Register Control Con	
4 5 Re	TUPS He vide (25):11 DECEMBENT CONTROL AND CONTROL OF THE CONTROL	29.20
	Batten Ban State	29.20) Shared Link
RPM x 1000 Par	Velobij DASum Rek 30 a. DASum Rek 30 a. Igrore Dikum T Velobij VOB01 ale V	Cess E
616 rpm	HIC Salus Use GPHOT Heading T Lase Hig I grider accel	
40 60 A/C L	Mode Sand	
	Clog GPS3108 KGPS310B Adjust Unchanged ↓[E [↑]]>>Serd	
46%	Cee 0.0000000000000000000000000000000000	
0 5 10 15 20 25 12		
Bra		Login Success
Thr		
	EXT 0 10 20 30 40 50 Time (a)	
Ste		
Manual		973
Mailuai		102
WAAS: 7 Enabled	🛃 start 🔰 🕫 🖒 🏯 döss - Ache Mini: 🕒 döt5ho - Bakin Sef 🕒 trik - Oj Shared Data 🕒 Djäurfundone, Vers 🕒 dötberfkip , Verson I 🗣 döcader , Verson I 🦉 interviewe and the start of the	503 -
Temp Health Link Qual	🗃 hulo Tuned St 750 , 😧 Karas Autoreat XU	
25% 31350 1		
🔊 🌈 📷		4:02 PM
		3/18/2015

- 24. In the mover, verify that the transmission cable is connected and the steering wheel is secured with Velcro.
- 25. You are now ready to start path playback with the mover. Refer to the "Path Playback with H-Field Mover" bulletin.

Contact Information

Kairos Autonomi 498 West 8360 South Sandy, Utah 84070 USA 801-255-2950 (office) 801-907-7870 (fax) www.kairosautonomi.com